


HTC 6330 RHYME

USERS MANUAL

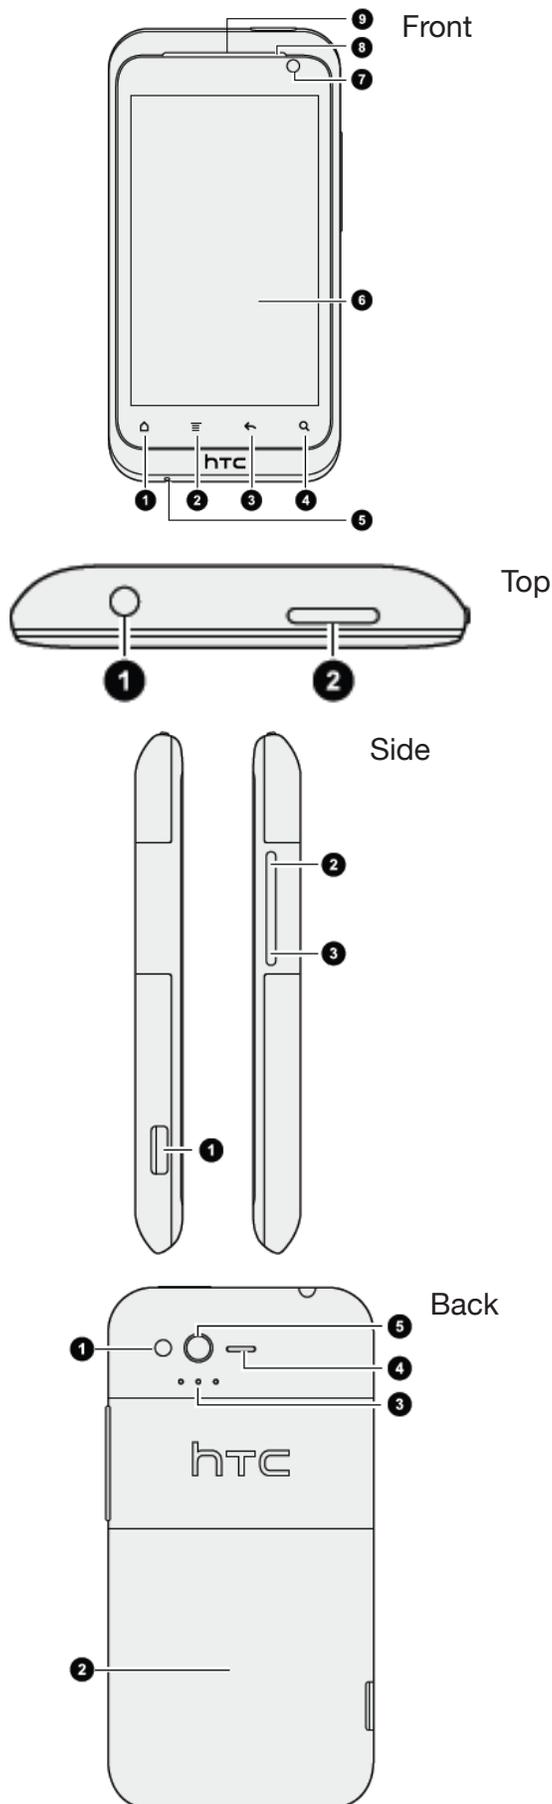

Key Functions - Front

- 1. Home Key:** Touch to display the Home screen. Touch and hold to display recent applications or launch Task Manager.
- 2. Menu Key:** Touch to display options for the current screen.
- 3. Back Key:** Touch to return to the previous screen or option.
- 4. Search Key:** Touch to launch Search, to search your device or the web.
- 5. Microphone:** Allows callers to hear your voice and when recording.
- 6. Touch Screen:** Allows a user to interact with the phone by touching areas on the screen.
- 7. Front Camera:** Used when taking photos or recording videos.
- 8. Notification LED:** Changes based on battery state.
- 9. Earpiece:** Listen to callers.

Key Functions - Top

- 1. 3.5mm Headset Jack:** Plug in an optional headset or TTY equipment.
- 2. Power/Lock Key:** Press and hold to turn the phone on or off. Press to lock the phone, or to wake the screen for unlocking.

Key Functions - Side

- 1. USB Power/Accessory Port:** Connect a USB cable for charging or to sync music and files.
- 2. Volume Up:** From the Home screen, press to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- 3. Volume Down:** From the Home screen, press to adjust Master Volume. During calls or music playback, press to adjust volume. Press to mute the ringtone of an incoming call.

Key Functions - Back

- 1. Power LED Flash:** Used when taking photos.
- 2. Back Cover:** Covers the battery.
- 3. Dock Contacts:** Dock Mode turns HTC Rhyme into a desk clock, photo slideshow viewer, or music player. You can also set it as a speakerphone when you receive calls while HTC Rhyme is docked. *(Dock not included)*
- 4. Speaker:** Plays ringtones, call audio when in Speakerphone mode, music and other sounds.
- 5. 5 Megapixel Camera:** Used when taking photos or recording videos.


Getting started

Rechargeable battery

HTC Rhyme uses a built-in, rechargeable battery. How long the battery can last before it needs recharging depends on how you use HTC Rhyme. The features and accessories you use can affect battery life. For example, leaving your Bluetooth® connection always on uses more power. Long phone calls and frequent web browsing use up a lot of battery power. Also, consider your location: poor signal strength and extreme temperature make the battery work harder.

Charge the battery

1. Insert the small end of the charger cable into the USB connector.
2. Plug in the charger to an electrical outlet to start charging the battery.

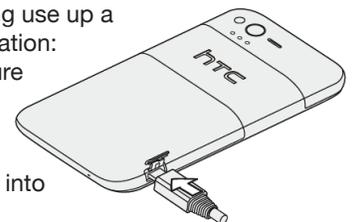

CONTINUED ON BACK

Turning Your Phone On/Off

On:

- Press and hold the **POWER** button.

Off:

1. If the display is off, press the **POWER** button to turn it back on, then unlock the screen.
2. Press and hold the **POWER** button for a few seconds.
3. When the Power options menu appears, tap **Power off**.

Unlocking The Screen

By default, the phone locks automatically when the screen times out, or you can lock it manually. You can unlock the phone using one of the default Unlock screens, or for increased security, use a personal screen unlock pattern.

Locking the Phone Manually:

- Press the **POWER** button on the top of the phone while the screen is on.

Unlocking the Phone Manually:

- Press the **POWER** button to wake the screen.
- Unlock the screen.

Making Calls

1. On the Home screen, tap .
2. Begin entering the first few digits of a phone number or characters of a contact name on the phone keypad. The Phone dialer screen then displays a list of matching numbers and names.
3. Slide your finger up on the filtered list to close the phone keypad and see if there are more matching numbers or contacts.
4. To place a call, do one of the following:
 - Tap a phone number or contact from the list.
 - After entering a complete number, tap Call.
 - To call a different phone number associated with the contact, you can tap at the right side of the contact name. On the contact details screen, tap the number you want to call.

Answering Calls

You can answer incoming calls when phone is locked or unlocked.

With the phone unlocked, touch **Answer**.


– or –

With the phone locked, touch and drag  to the right to unlock the screen and answer the call.

Ending a Call:

Do one of the following:

- Tap **Decline**.
- If the display is off when you get a call, the Lock screen appears. Drag  to the ring on the Lock screen.
- Press the **POWER** button twice to reject a call.

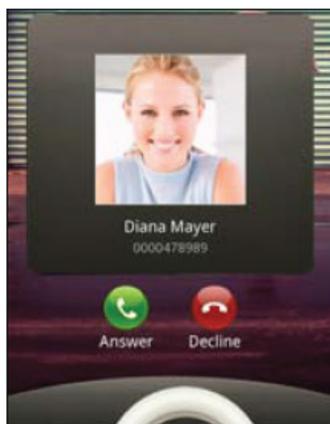

Voicemail

Setting Up Voicemail:


1. From the Home screen, tap  > **Voice Mail** > **Visual Voice Mail**.
2. When prompted, enter your basic voice mail password.
3. Read the terms of use statement and then tap **Subscribe** to continue.
4. Tap **Exit** and wait 5 minutes before using Visual Voice Mail.

Checking Voicemail:

1. From the Home screen, tap  > **Voice Mail**. If this is the first time you use Visual Voice Mail after setting it up, you are asked to read the terms of use. Read the terms of use and tap **Accept** to continue.
2. On the Voicemail screen, you can:
 - Tap **Compose voicemail** to record and send a voice mail.
 - View all your voice mail messages.
 - Press **MENU**  to sort and delete voice mails, call your voice mail box, configure voice mail settings, and more. You can also sync with the Visual Voice Mail server to refresh your voice mail messages list.

Text Messaging

1. From the Home screen, tap  > **Messages**.
2. Tap .
3. Fill in one or more recipients. You can:
 - Enter the first few letters of a contact name or starting digits of a mobile number. As you type, matching names with phone numbers from your stored contacts are displayed. Tap a name or one of the contact's numbers.
 - Tap , and then select the phone numbers of the contacts to whom you want to send the message. You can also select contact groups as recipients.
 - Enter the complete phone numbers directly in the To field.
4. Tap the box that says **Add text**, and then enter your message.
5. Tap **Send**, or press **BACK**  to save the message as a draft.

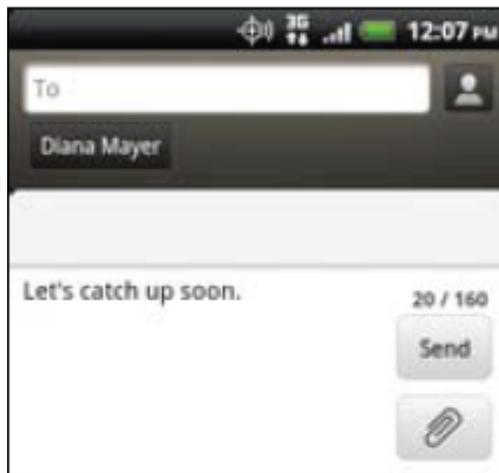

Turning Wi-Fi On/Off

1. From the Home screen, press **MENU** , and then tap **Settings** > **Wireless & networks**.
2. Tap **Wi-Fi settings**. Detected Wi-Fi networks are displayed in the Wi-Fi networks section.
3. To manually scan for available Wi-Fi networks, on the Wi-Fi screen, press **MENU** , and then tap **Scan**.
4. Tap another Wi-Fi network to connect to it.

Accessing Internet

Do one of the following to open the web browser and start surfing the Web:

- On the Home screen, tap **Internet**.
- From the Home screen, tap  > **Internet**.

Turning Bluetooth On/Off


1. From the Home screen, press **MENU** , and then tap **Settings** > **Wireless & networks**.
2. Select or clear the **Bluetooth** check box.

An even easier way to turn Bluetooth on or off is with the Bluetooth widget on the Home screen.

Taking Pictures

1. From the Home screen, tap  > **Camera**.
2. Before taking the photo, you can zoom in or out first on your subject.
3. Tap the flash button repeatedly to choose a flash mode depending on your lighting conditions.
 -  Auto flash
 -  Flash on
 -  Flash off
4. Choose the resolution and other camera settings you want to use.
5. Choose an effect to apply to your photo.
6. Point the camera and focus on your subject.

If you're taking a photo of a group of people, the camera will automatically recognize faces and adjust the focus. You'll see boxes on people's faces.

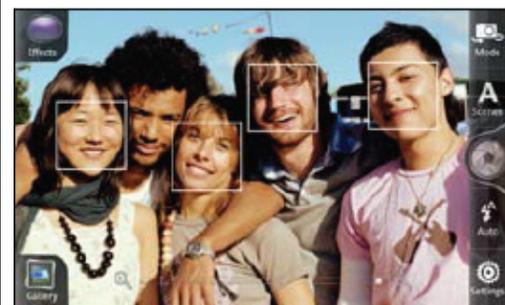

7. When you're ready to take the photo, tap .
8. Choose what you want to do with the photo you've just taken.

Taking Video

1. From the Home screen, tap  > **Camcorder**.
2. Choose the video quality and other camera settings you want to use.
3. Choose an effect to apply to your video.
4. Frame your subject on the Viewfinder screen.
5. Tap  to start recording.
6. You can freely zoom in or out while recording video.
7. You can change focus to a different subject or area by just tapping it on the Viewfinder screen.
8. Tap the flash button to switch the camera light on or off during recording.
 -  Light on
 -  Light off
9. To stop recording, tap  again.
10. Choose what you want to do with the video you've just recorded.