

# LG EXALT LTE

## Users Manual

### Open view



### Key Functions

- 1. Home Screen** Displays messages, indicator icons, and active functions.
- 2. Left soft key** Allows you to select the command at the lower left area of the display screen.
- 3. Speakerphone key** Allows you to enable or disable the speakerphone mode. (Speakerphone available only while on call).
- 4. Send key** Allows you to make and answer calls. Press from standby mode to access your call history (All calls, Missed calls, Dialed calls and Received calls).
- 5. Clear key** Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens. Press to back out of menus, one level at a time.
- 6. Earpiece** Lets you hear the caller and automated prompts.
- 7. OK key / Navigation key** Use the OK key  to select options and menus. Use the Navigation key  to scroll through menu items and highlight a specific field or object, then press the OK key  to select it.
- 8. Right soft key** Allows you to select the command at the lower right area of the display screen.
- 9. Voice commands key** Press for quick access to Voice Commands from standby mode (the Home screen).
- 10. End/Power key** Allows you to turn the power on/off and to end a call. Also exits menus and returns to standby mode (the Home screen).
- 11. Vibrate mode key** Allows you to set Vibrate mode from standby mode (the Home screen), press and hold for about 3 seconds.
- 12. Microphone** Allows you to transmit your voice to a caller or for voice-activated functions.

### Side views



### Key Functions

- 1. Volume key** Allows you to adjust the volume.
- 2. USB/Charger port** Connects the phone to the USB charger.
- 3. Headset jack** Allows you to plug in an optional 3.5mm headset for hands-free conversations, or other compatible listening devices.
- 4. Camera key** Allows you to access camera mode. Press once the Camera key to take a picture and press and hold for recording a video.

### Front and rear views



### Key Functions

- 1. LED** Indicates incoming calls, new notifications, charging status, etc.
- 2. Microphone** Allows you to transmit your voice to a caller or for voice-activated functions (e.g., Voice commands).
- 3. Camera** Allows you to take pictures. Keep it clean for optimal performance.
- 4. Speaker** Allows you to hear sounds emitted from your phone as well as media content (e.g., music files).

## Getting Started


### The Battery

#### Installing the battery

- With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and lift the cover up gently.



2. Insert the battery, making sure the gold contacts line up. Press down gently to secure it.

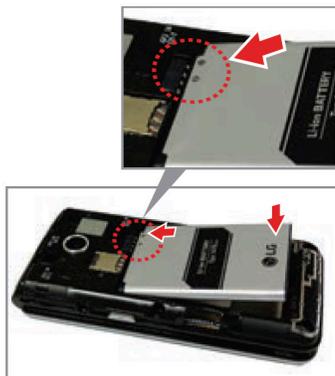

3. Place the back cover over the back of the phone and then press down along the edges to secure.



## Charging the Battery

Fully charge the battery before using your phone for the first time to improve your battery lifetime.

The USB / Charging port is on the side of the phone. Insert one end of the Charger Cable into the port and plug the Charger into an electrical outlet.



## Turning The Phone On / Off

To turn your phone on or off, press and hold the **End/Power key**.

## Phone Features

### Messaging

1. From the Home screen, press the Right soft key **Message**.
2. View conversation threads and send messages.
  - Use the Navigation key **○** to highlight a conversation thread, then press the OK key **○** to view it.
  - Press the Left soft key **Message** to start a new message, enter the information required (recipient, text, content, etc.), then press the Send key **SEND**.
  - Press the Right soft key **Options** to select threads, access Message+ settings, and more.

## Taking a Picture

1. From the Home screen, press the OK key **○** Menu or press the Camera key **📷** on the right side of the phone.
2. Press the **g** key **Camera**.
3. Hold the phone and point the lens towards the subject of the photo.
4. Press the OK key **○** Take to take a photo. Your picture will be automatically saved to the Gallery.

## Recording a Video

1. From the Home screen, press the OK key **○** Menu.
2. Press the **g** key **Camera**.
3. Press the Right soft key **Options**, then press the **1** key **Record video** to activate video mode.
4. Point the lens towards the subject of the video and press the OK key **○** REC to start recording.
  - Press the Left soft key **Pause** to pause your video recording. Then, resume your recording by pressing the Left soft key **Resume**.
5. Press the OK key **○** Stop to stop recording and your video will be automatically saved to the Gallery.

## Email Setting Up Email

The following account types are supported: Microsoft Exchange, Outlook, Yahoo! Mail, AOL Mail, Verizon, and other accounts.

1. From the Home screen, press the OK key Menu.
2. Press the **6** key Email.

After the initial setup, the Email app displays the contents of your Inbox. It's quick and simple to set up a POP3 or IMAP4 email account.

1. From the Home screen, press the OK key Menu, then press the **6** key Email.
2. The first time you open the Email app, you need to setup an email account.
3. Enter the necessary information using the Navigation key, the keypad and the OK key.

## Using Your Email

1. From the Home screen, press the OK key **○** Menu.
2. Press the **6** key **Email**.
  - Press the Left soft key **Compose** to compose a new message.
  - Use the Navigation key **○** to scroll through your Inbox list.
  - Press the OK key **○** View to open a highlighted message.
  - Press the Right soft key **Options** to access Sync now, Delete, Search, Mark as read/unread, Move, Select emails, Sort by, Folders, Accounts, and Settings.

## Turning Wi-Fi On / Off

1. From the Wireless & networks menu screen, press the **2** key **Wi-Fi**.
2. Use the Navigation key **○** to highlight a Wi-Fi network, then press the OK key **○** Connect to connect to it.
3. Press the Right soft key **Options** to access the following Options to manage your Wi-Fi connections.

## Bluetooth

1. From the Wireless & networks menu screen, press the **3** key **Bluetooth**.
2. Press the Left soft key **Turn on** to pair and connect with other Bluetooth devices. All Bluetooth devices that are within your phone's range will be listed. Use the Navigation key **○** to highlight a device to pair and connect.

## Making & Answering Calls

### Making Calls

1. Use the dialpad to enter the number you want to call.
2. Press the **Send** key **SEND** to dial the number that you entered.

### Answering Calls

- If the phone flip is closed, simply open to answer.
- If the phone flip is already open, press the Send key **SEND** to answer the incoming call.

### Ending Calls

Simply press the **End** key **END** to end the call.

## Voicemail Setting Up Voicemail

1. From the Call settings menu screen, press the **5** key Voice mail.
2. Select a Voice mail option.
  - Press the **1** key **Service** to view the Voice mail service carrier.
  - Press the **2** key **Setup** to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided by the network.
  - Press the **3** key **Notification sound** to set the sound played when a voicemail arrives.
  - Press the **4** key **Vibrate** to set when to vibrate for voice mail notifications.

## Checking Voicemail

1. From the main screen, select MENU.
2. Select Messaging.
3. Select Voicemail.
4. Press OK **○** to choose CALL.